Item #1005 698 347 Model #NXT-SL9547

HAMPTON BAY.

USE AND CARE GUIDE

LARGE CAFÉ STRING LIGHTS



00 % 189

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of these lights. We strive to continually create qualify products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.

Thank you for choosing Hampton Bay?

Warrenty

For warranty information on this product, please contact the Hampton Bay Customer Service Team at 1-855-HD-HAMPTON or visit www.HAMPTONBAY.com.

HAMPTON BAY.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. ~ 7 p.m., EST, Monday ~ Friday, 9 a.m. ~ 6 p.m., EST, Saturday

> 1-855-HD-HAMPTON HAMPTONBAY.COM

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be taken, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

WARNING: Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect to a ground-fault circuit interrupter (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.

WARNING: This seasonal use product is not intended for permanent installation or use.

WARNING: Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat:

WARNING: Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.

WARNING: Do not let lamps rest on the supply cord or on any wire.

WARNING: Unplug the product when leaving the house, when retiring for the night, or if left unattended.

WARNING: This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.

WARNING: Do not use this product for any purpose other than its intended use

MARNING: Do not hang ornaments ar other objects from cord, wire, or light string.

WARNING: Do not close doors or windows on the product or extension cords as this may damage the wire insulation.

WARNING: Do not cover the product with cloth, paper or any material not part of the product when in use.

WARNING: This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. Do not after or replace the plug.

WARNING: This product amploys overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the instructions in this manual (follow the product marking for proper fuse rating) and check the product, the replacement tuse blows, a short-circuit may be present and the product should be discarded.

WARNING: If connecting to a lighting string that does not have a Wattage (W) rating (found on the tag within 6 inches of the plug) calculate the wattage as follows: Multiply the current (___A) which is on the flagtype tag by 120. For example: Lighting string is rated 120 V, 60 Hz, 0.1 Amps. 0.1 X 120 = 12 Watts. Add the wattage of each light string together for a total of 432 Watts or less. Do not exceed 432 Watts.


Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS.

Pre-Installation



NOTE: Before assembly, carefully remove and inspect all parts as listed in the Package Contents table. If any part appears missing or damaged, do not assemble this product. Contact Hampton Bay Customer Service

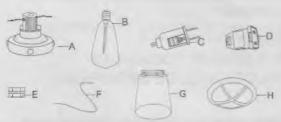

Part	Description	Quantity
A	Lamp cap	10
B	Lamp	10
C	Male plug	1
D	Female plug	1
E	Fuse	2
F	Wire	1
G	Plastic cage	10
H	Plastic cage bottom part	10

Assembly

- Twist the lamp (B) counterclockwise into the lamp cap (A). See Figure 1.
- Twist the plastic cage (G) counterclockwise into the lamp cap (A). See Figure 1.
- Set up the plastic cage bottom part (H) into the plastic cage (G). See Figure 1.
- Repeat step 1 until all the lamps are in the lamp caps. See Figure 2.






Fig. 2



Use and Care Instructions



WARNING: Before using or reusing, inspect the product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.



CAUTION: To reduce the risk of fire and electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and b) Do not mount or support strings in a manner that can cut or damage wire insulation.

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable,

STORAGE GUIDELINES

When storing the product, carefully remove the product from wherever it is placed. including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires. When not in use, store neatly in a cool, dry location protected from sunlight.

User Servicing Instructions

REPLACING THE FUSE




WARNING: Risk of fire. Replace the fuse only with a 5 Amp. 125 Volt fuse (provided with product).



WARNING: Alsk of fire. Do not replace the attachment plug. The plug contains a safety device (fuse) that should not be removed. Discard the product if the attachment plug is damaged.

- Grasp the plug and remove it from the receptable or other outlet device. Do not unplug the lights by pulling on the cord.
- Slide open the fuse cover on top of the attachment plug towards the blades.
- Remove the fuse (E) carefully.
 Slide the fuse access cover closed on top of the attachment plug.

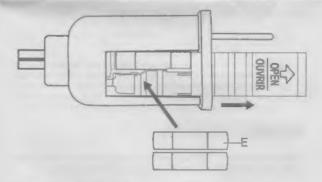

REPLACING THE LAMP



CAUTION: Replace the bulbs with only the same type of 0,57 Watt max candelabra-base (E12) UL-classified lamps



CAUTION: Risk of fire. Do not deliberately reposition either lamp holder